



# Double Flap Baffle

## Wall Mount Baffle or Double Flap Baffle

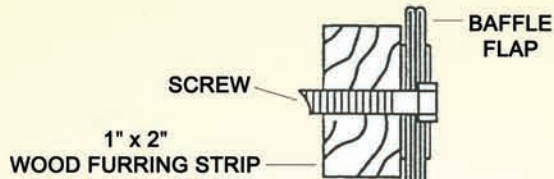




### DRYWALL INSTALL

1. Locate stud and attach wood strips to wall with wood screws after drilling holes.
2. Attach flap of panel to wood strip with short wood screws and washers.

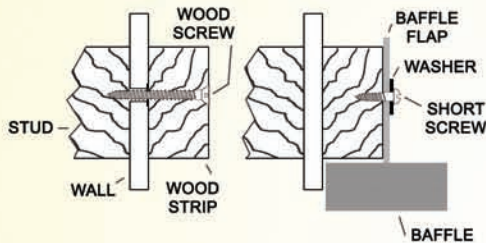


### CINDER BLOCK INSTALL

1. Drill hole and insert anchor into block.
2. Attach wood strips to wall with screws inserted into anchors.
3. Attach flap of panel to wood strip with short wood screws and washers.

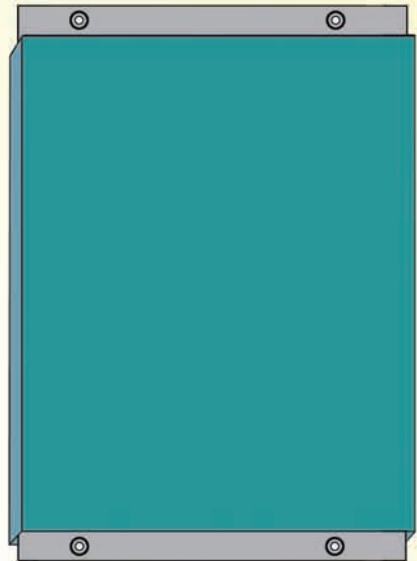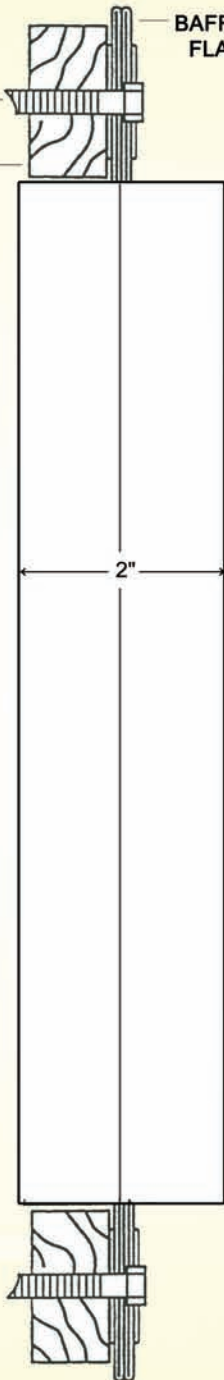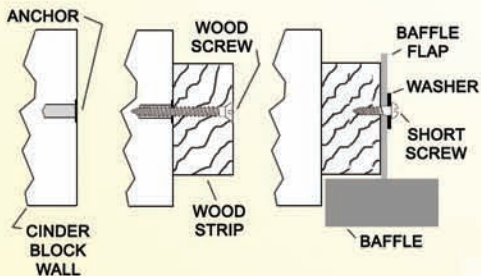

DOUBLE FLAP BAFFLE

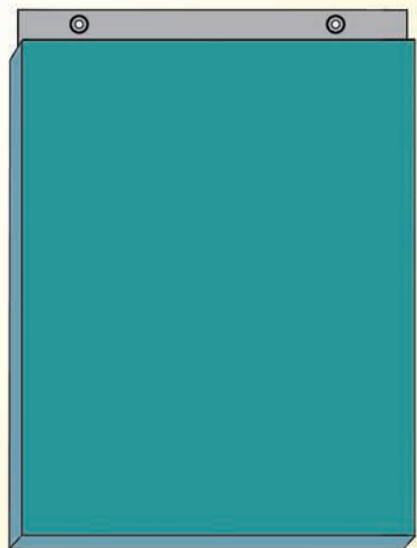

BAFFLE

